


Change ZVA Slimline 2 / ZVA Slimline 2 GR into LeverAssist® version (see Information 1.10 E):



ZVA Slimline 2 / GR, LeverAssist (EA 003), tools

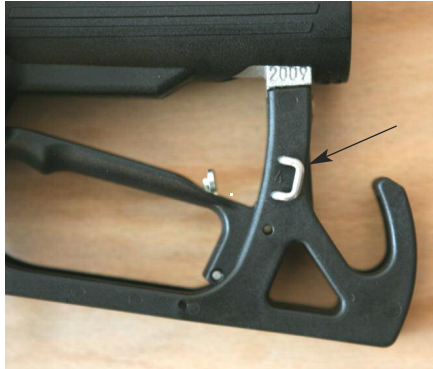

If latch pin EB 280 is fitted ...



... remove with slot screwdriver.



Remove Product Sleeve or Splashguard.



Remove scuffguard.



Unscrew rear guard screws.




Unscrew front guard screws.



Remove guard. Pins EB 235 must not fall out.



Drive out bolt carefully, with the help of a hammer

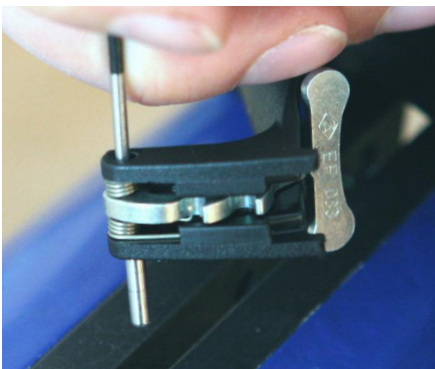

... and a mandrel.



Remove hold-open latch and latch spring.




Re-insert latch spring in shown direction.



Insert LeverAssist part as shown.



Re-insert bolt EB 031 ...

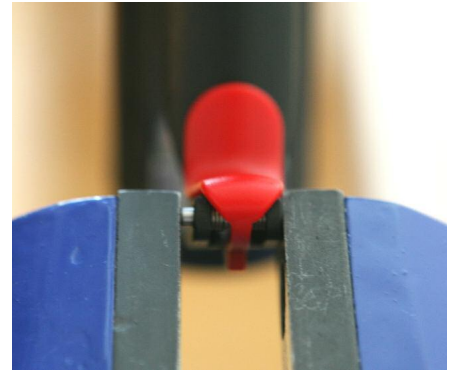


... and drive it in with a vice.



The lever should look like this now.



Take supplied 'ramp' for the LeverAssist ...

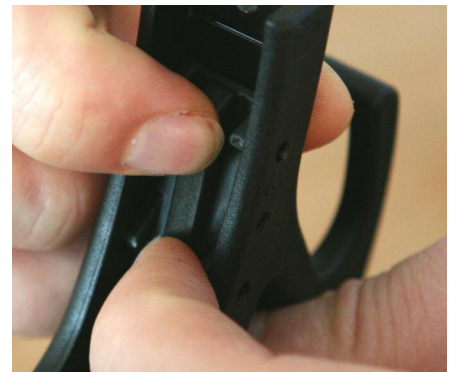


... and push it into the guard as shown.




Legs of ramp must snap in properly.




Control lever pins EB 235. Assemble guard.

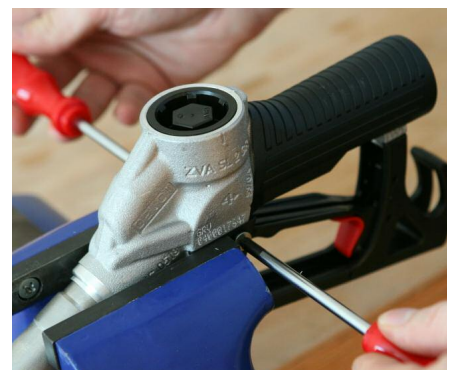

Tighten front + rear guard screws.

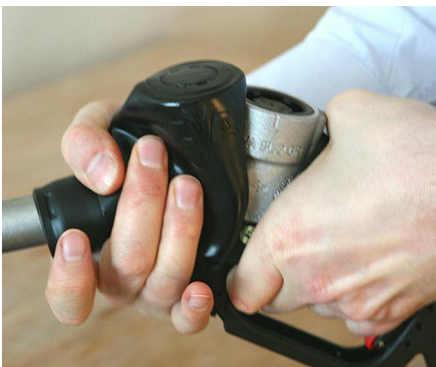

Assemble scuffguard. Push product sleeve ...

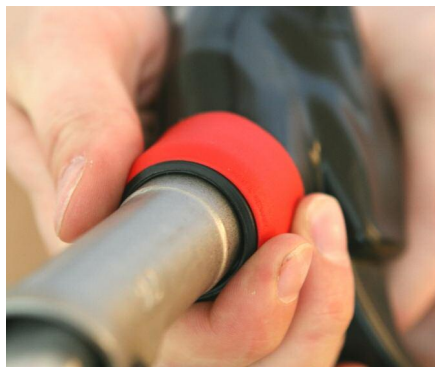

... over scuffguard until it snaps in properly.



Test function.

Please note:

Modifications to nozzles must only be done by suitably trained technicians. Observe safety regulations and safe work practices for petroleum handling equipment on forecourts.